



**Take out the frame.**



**Attach cam-lock screws to pre-drilled holes on frame.**



**Take out side panels.**



**Attach side panel to frame.**





**Insert bottom panel.**



**Attach back panel to fit.**







**Attach plastic bracket to pre-drilled holes on the back, tighten with crews.**



**Insert sliding tracks to the bracket.**




**Screw the track to the frame.**



**Use rubber hammer to connect the dovetail drawer box.**



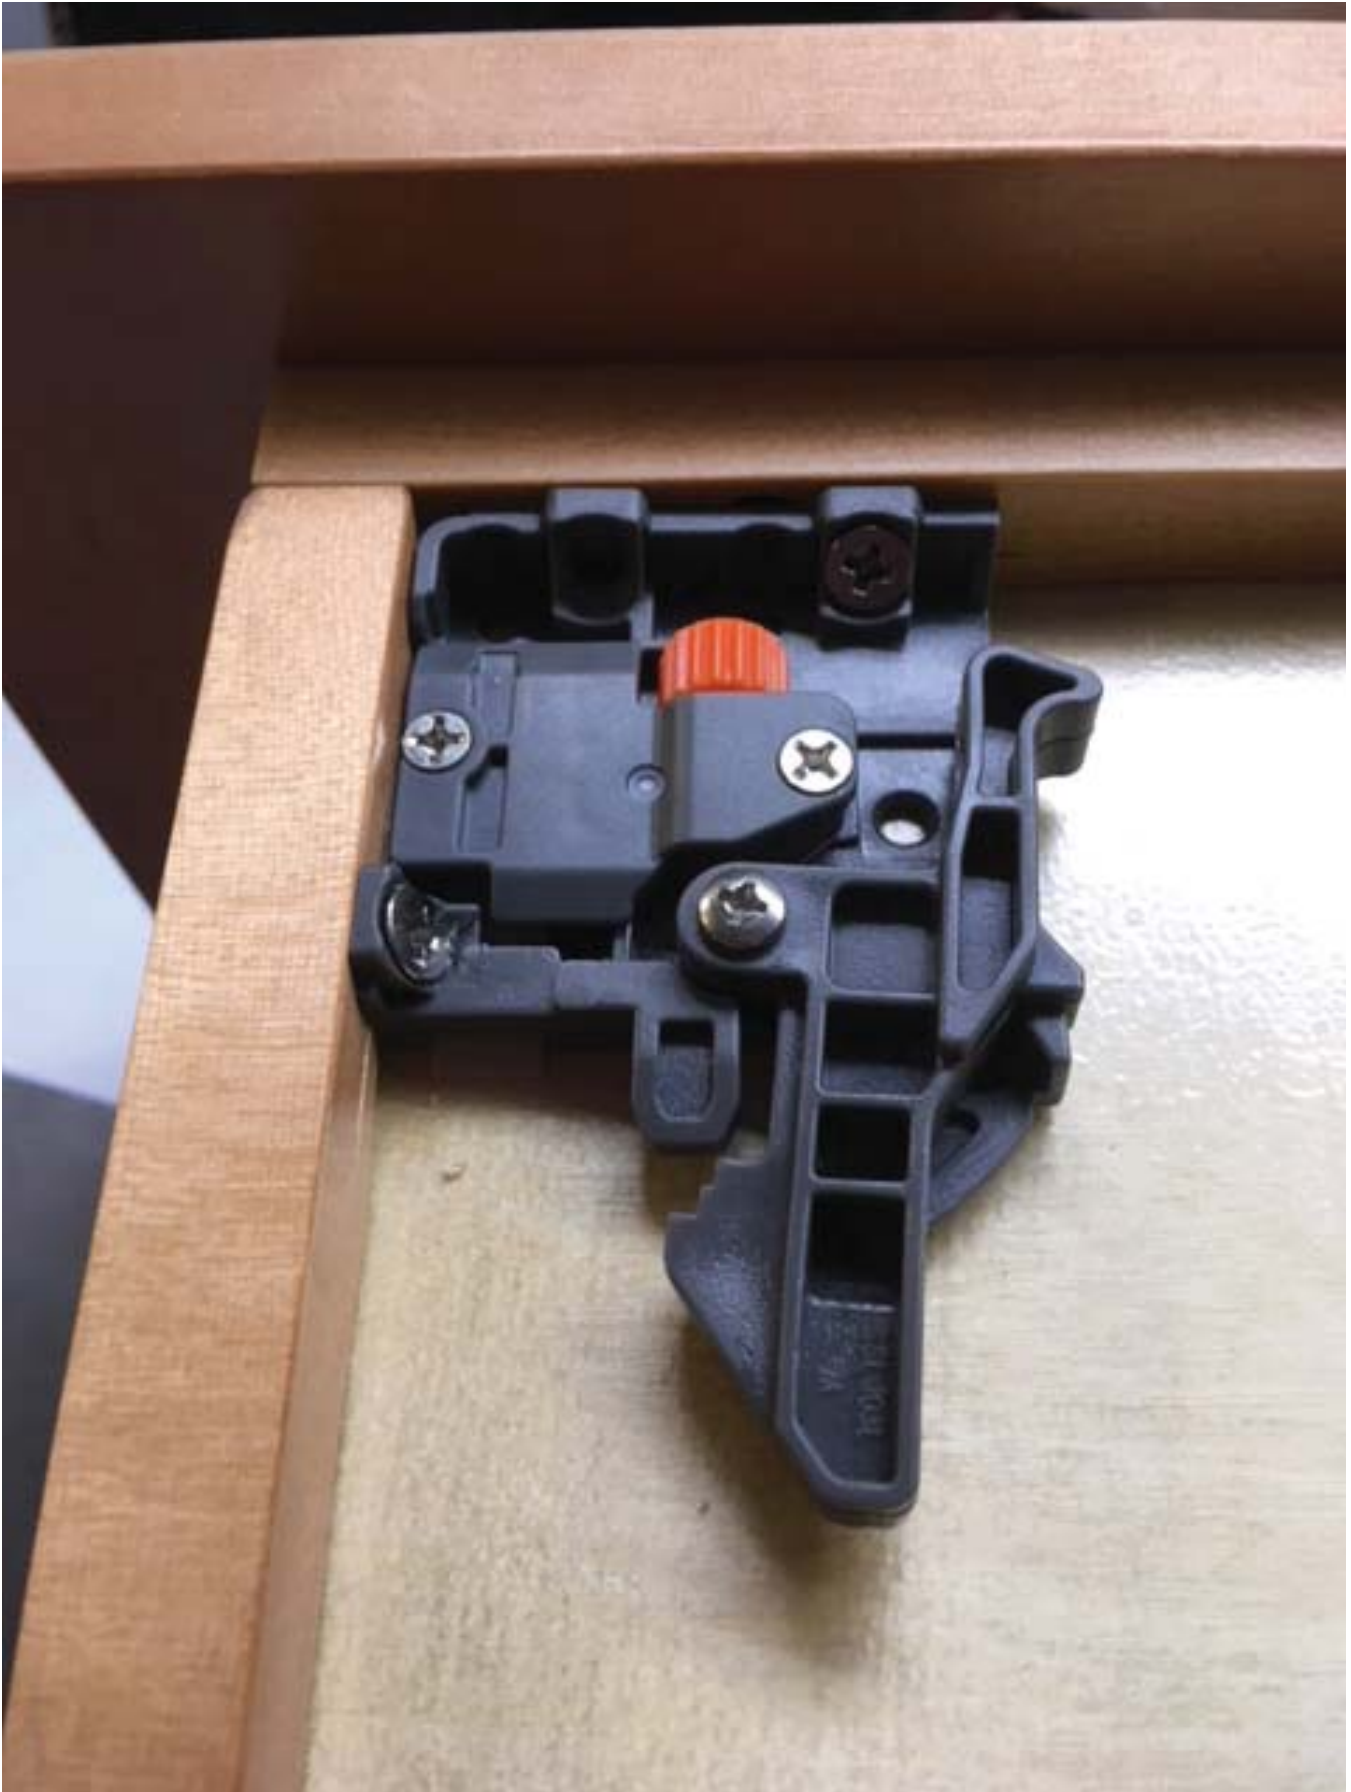

**Install the dovetail joints.**



**Pull out the track on the cabinet, slide the drawer box in.**



**Attach shelf pins.**







**Attach hinges to door.**



**Install the door to frame.**



**Now it's finished.**